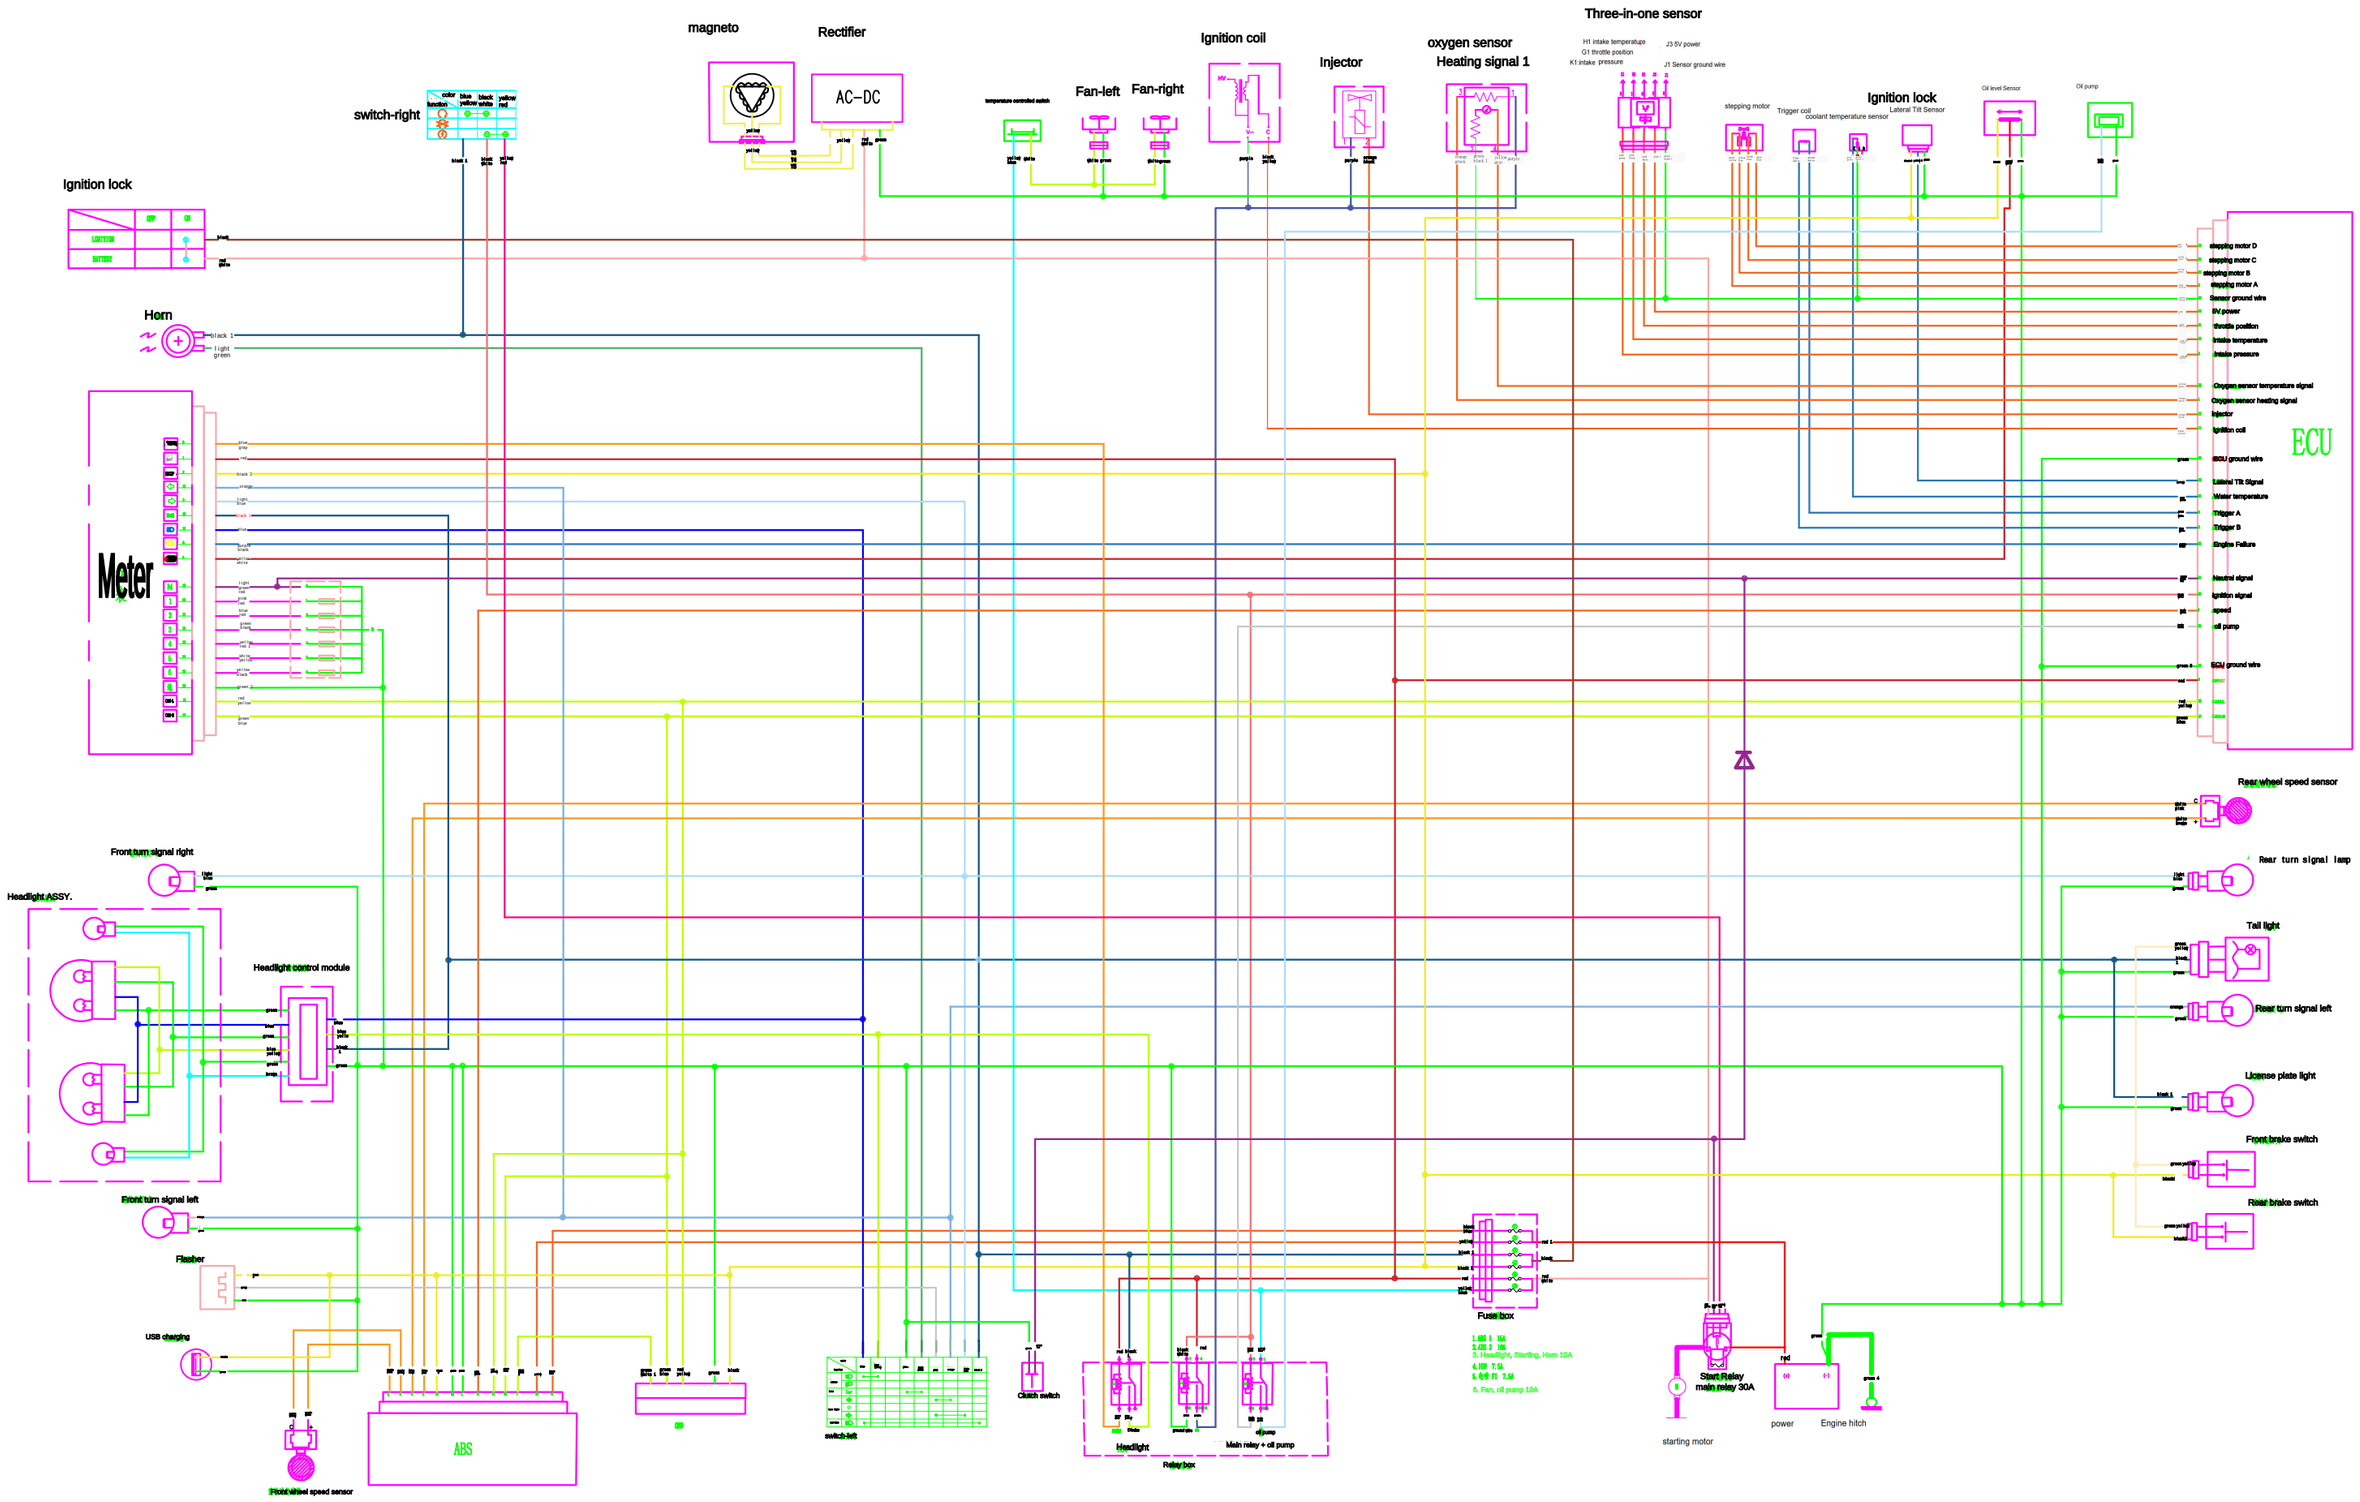
Ignition lock
OFF
ON
IGNITION
BATTERY
Horn
Meter
switch-right
magneto
Rectifier
AC-DC
temperature controlled switch
Fan-left
Fan-right
Ignition coil
Injector
oxygen sensor
Heating signal 1
Three-in-one sensor
H1 intake temperature
G1 throttle position
K1 intake pressure
J3 5V power
J1 Sensor ground wire
stepping motor
Trigger coil
coolant temperature sensor
Ignition lock
Lateral Tilt Sensor
Oil level Sensor
Oil pump
ECU
stepping motor D
stepping motor C
stepping motor B
stepping motor A
Sensor ground wire
5V power
throttle position
Intake temperature
Intake pressure
Oxygen sensor temperature signal
Oxygen sensor heating signal
Injector
Ignition coil
ECU ground wire
Lateral Tilt Signal
Water temperature
Trigger A
Trigger B
Engine Failure
Neutral signal
Ignition signal
speed
oil pump
ECU ground wire
Rear wheel speed sensor
Rear turn signal lamp
Tail light
Rear turn signal left
License plate light
Front brake switch
Rear brake switch
Front turn signal right
Headlight ASSY.
Headlight control module
Front turn signal left
Flasher
USB charging
Front wheel speed sensor
ABS
switch-left
Clutch switch
Headlight
Main relay + oil pump
Relay box
Fuse box
1. ABS 1 15A
2. ABS 2 15A
3. Headlight, Starting, Horn 10A
4. 仪表 7.5A
5. 电喷 F1 7.5A
6. Fan, oil pump 10A
Start Relay
main relay 30A
starting motor
power
Engine hitch